 

 

 





 












 
 

 

 

 

 

 
 
 

 




 




 























Original	Rechange	Original	Rechange
 Power	 Power	 P+	 CH+ / Page+
 Source	 AV / Input / RDS	 Vol-	 Vol-
 1	 1	 P-	 CH- / Page-
 2	 2	 Mute	 Mute / Dimmer
 3	 3	 [G]	 Menu / Home
 4	 4	 Up	 Up
 5	 5	 i	 Info / Angle
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Back	 Back / Return
 Lang	 Audio / Lang I/II	 Down	 Down
 0	 0	 Exit	 Exit / Cancel / Clear
 TXT	 Text / Goto	 <<	 << / Tune-
 Home	 Smart / List	 Pause	 Pause / Step / Freeze
 Home	 D.Menu / Top	 >>	 >> / Tune+
 Vol+	 Vol+	 Rec	 Rec / Rec Mode





Original	Recharge
 Play	 Play / Slow
 Stop	 Stop / Hold
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Recharge

