



Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Back
 Still	 Pause
 TV / Input	 AV
 Multimedia	 Media
 Zoom -	 Shift + Down
 Zoom +	 Shift + Up

Original	Rechange
 Up / PR +	 Up
 Up / PR +	 Ch +
 Down / PR -	 Down
 Down / PR -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -
 Menu	 Menu
 Menu	 Ok
 Prev PR	 Pre Ch
 Screen Size	 3D
 Mute	 Mute
 Sleep	 Sleep
 [≡]	 Text
 [≡?]	 Smart
 [≡X]	 Exit





 
 
 

 

 
 
 
 


 

 

 

 
 


 

 
 

 
 
 

 

 
 
 

 














Original		Recharge		Original		Recharge	
	[≡↓]		Eject				
	[≡●]		TV/R				
	[≡□]		Stop				
	Pic Mode / [/≡]		Format				
	Sound Mode / [≡]		Dual				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue / I-II		Blue				
	Blue / I-II		Shift + Dual				





Original	Rechange	Original	Rechange
 Power	 Power	 Menu	 Ok
 1	 1	 << FR / Slow	 <<
 2	 2	 Play	 Play
 3	 3	 >> FF / Slow	 >>
 4	 4	 Stop	 Stop
 5	 5	 I<< Prev	 I<<
 6	 6	 Open / Close	 Eject
 7	 7	 >>I Next	 >>I
 8	 8	 Pause	 Pause
 9	 9		
 0	 0		
 TV / Input	 AV		
 Up / PR +	 Up		
 Up / PR +	 Ch +		
 Down / PR -	 Down		
 Down / PR -	 Ch -		
 Menu	 Menu		





Original		Recharge	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up / PR +		Up
	Up / PR +		Ch +
	Down / PR -		Down
	Menu		Ok
	Down / PR -		Ch -
	Menu		Menu

Original		Recharge	
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue / I-II		Blue
	Blue / I-II		Dual

