



Original	Rechange
Mute	Mute / Dimmer
Power	Power
1	1
2	2
3	3
Red / Clear	Exit / Cancel / Clear
Red / Clear	Red / Netflix / Search
4	4
5	5
6	6
Green / Sleep	Sleep / Timer
Green / Sleep	Green / APP / Repeat
7	7
8	8
9	9
Yellow / Input	Yellow / YouTube / Repeat
Yellow / Input	AV / Input / RDS

Original	Rechange
C-0 Stop	Guide / EPG / -/--
0 / ATK	0
C-Reset	Fav / Marker / PC
Blue / Normal	Blue / Prime Video / Random
Index - / [≡□]	I<< / Preset-
Up / PR/TRK+ / Page+	CH+ / Page+
Up / PR/TRK+ / Page+	Up
Index+ / [≡i]	>>I / Preset+
Left / Vol-	Left
Left / Vol-	Vol-
Menu	Menu / Home
Menu	OK
Right / Vol+	Right
Right / Vol+	Vol+
Rec / OTR	Rec / Rec Mode
Down / PR/TRK- / Page-	Down
Down / PR/TRK- / Page-	CH- / Page-



