 
 
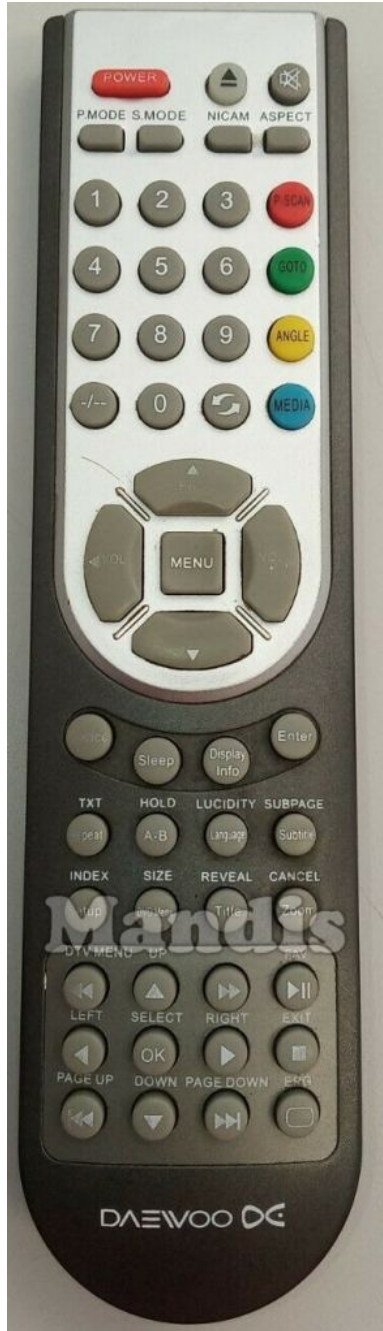 





 

 

 

 




 

 



 


 
 
 







 










 




 


Original	Rechange
 Power	 Power
 DVD	 Eject
 Mute	 Mute
 PMode	 Shift + Format
 SMode	 Shift + Dual
 Nicam	 Dual
 Aspect	 Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 -/--	 Shift + Guide
 Recall	 Back
 Red / DVD P.Scan	 Red
 Green / DVD Goto	 Green
 Yellow / DVD	 Yellow
 Blue / DVD Media	 Blue
 Blue / DVD Media	 Media
 PR+ / Up	 Ch +
 PR+ / Up	 Shift + Up
 PR- / Down	 Ch -
 PR- / Down	 Shift + Down
 Vol+ / Right	 Vol +
 Vol+ / Right	 Shift + Right
 Vol- / Left	 Vol -
 Vol- / Left	 Shift + Left
 Menu	 Menu
 Source	 AV





Original	Rechange
 Sleep	 Sleep
 Display Info	 Info
 Enter	 Shift + Ok
 TXT / DVD Repeat	 Text
 Hold / DVD A-B	 TV/R
 Lucidity / DVD Language	 Options
 Subpage / DVD Subtitle	 Subt
 Index / DVD Setup	 Smart
 Size / DVD	 Shift + D. Menu
 Reveal / DVD Title	 List
 Cancel / DVD	 Shift + Eject
 DTV Menu / DVD	 D. Menu
 DTV Menu / DVD	 <<
 DVD >>	 >>
 FAV / DVD Play/Pause	 Pre Ch
 FAV / DVD Play/Pause	 Play
 FAV / DVD Play/Pause	 Pause

Original	Rechange
 Exit / DVD Stop	 Exit
 Exit / DVD Stop	 Stop
 Page Up / DVD	 Shift + Ch +
 Page Down / DVD	 Shift + Ch -
 Up	 Up
 Left	 Left
 OK / DVD Select	 Ok
 Right	 Right
 Down	 Down
 EPG / DVD □	 Guide

