




 

 

 


 







 

 


 

 

 




 
 



 


 




 


 
 



 







 




Original	Rechange	Original	Rechange
 Power	 Power	 Blue / Subtitle	 Blue
 DVB	 Media	 Blue / Subtitle	 Subt
 Prog+	 Shift + Ch +	 CH+	 Ch +
 Prog-	 Shift + Ch -	 CH-	 Ch -
 System	 Smart	 Vol+	 Vol +
 Nicam/A2	 List	 Vol-	 Vol -
 DVB Menu	 D. Menu	 TV-Menu	 Menu
 TV Format	 Format	 TV-Exit	 Exit
 Exit	 Shift + Exit	 Up	 Up
 Info	 Info	 Left	 Left
 Language	 Dual	 OK	 Ok
 Text	 Shift + Text	 Right	 Right
 FAV	 Pre Ch	 Down	 Down
 EPG	 Guide	 TV/AV	 AV
 Red / TV/Radio	 Red	 Display	 Shift + Info
 Green / Audio	 Green	 1	 1
 Yellow / Freeze	 Yellow	 2	 2





Original		Rechange		Original		Rechange	
3	3	3	3	REVEAL	Reveal	SETTINGS OPT	Options
4	4	4	4	CANCEL	Cancel	SHIFT + RETURN BACK	Shift + Back
5	5	5	5	SIZE	Size	ZOOM ▲	Eject
6	6	6	6	SUBPAGE	Subpage	SHIFT + AD SUBT	Shift + Subt
7	7	7	7	INDEX	Index	SHIFT + HOME SMART	Shift + Smart
8	8	8	8				
9	9	9	9				
0	0	0	0				
/--	/--	SHIFT + /-- GUIDE	Shift + Guide				
↺	Recall	RETURN BACK	Back				
PICTURE	Picture	SHIFT + PICTURE FORMAT	Shift + Format				
SOUND	Sound	SHIFT + SOUND DUAL	Shift + Dual				
MUTE	Mute	MUTE	Mute				
FREEZE	Freeze	II	Pause				
SLEEP	Sleep	PROG SLEEP	Sleep				
TV/TXT	TV/TXT	REPEAT TEXT	Text				
HOLD	Hold	■	Stop				

