




 
 

 
 









 
 
 













Original	Recharge
 Power	 Power
 Dimmer	 Smart
 Clock	 AV
 Sleep	 Sleep
 Tuner AMP	 Shift + 1
 Analog In AMP	 Shift + 2
 Digital In AMP	 Shift + 3
 Internet Radio Network	 Shift + 4
 Online Music Network	 Shift + 5
 Music Server Network	 Shift + 6
 iPod/USB Network	 Shift + 7
 CD CD	 Shift + 8
 iPod/USB CD	 Shift + 9
 CH+	 Ch +
 CH-	 Ch -
 I<<	 I<<
 Play	 Play

Original	Recharge
 Pause	 Pause
 <</Tune-	 <<
 Stop	 Stop
 >>I	 >>I
 >>/Tune+	 >>
 Add Favorite	 Pre Ch
 Call Favorite	 Dual
 SDB Tone	 Back
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Mode	 Subt
 System/Setup	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original		Recharge		Original		Recharge	
ENTER	Enter	OK	Ok	PROGRAM	Program	SHIFT + SLEEP	Shift + Sleep
SEARCH	Search	SEARCH TV/R	TV/R	INFO	Info	DISPLAY INFO	Info
NETWORK SETUP	Network Setup	APP MEDIA	Media				
1 ./	1	1	1				
2 ABC	2	2	2				
3 DEF	3	3	3				
4 GHI	4	4	4				
5 JKL	5	5	5				
6 MNO	6	6	6				
7 PQRS	7	7	7				
8 TUV	8	8	8				
9 WXYZ	9	9	9				
0 .*	0	0	0				
+10 <sub>off</sub> A	+10a/A	GUIDE	Guide				
CLEAR	Clear	CLEAR EXIT	Exit				
RANDOM	Random	PICTURE FORMAT	Format				
REPEAT	Repeat	REPEAT TEXT	Text				

