 
 




 






 
 







Original		Rechange		Original		Rechange	
	Power		Power		Quick Select 2		Text
	Input TV Audio		1		Quick Select 3		Eject
	Input Tuner		2		Quick Select 4		AV
	Input Bluetooth		3		CH + / Page +		Ch +
	Input Phono		4		CH - / Page -		Ch -
	Input USB		5		Eco		3D
	Input HEOS		6		Mute		Mute
	Input Internet Radio		7		Volume +		Vol +
	Input CBL/SAT		8		Volume -		Vol -
	Input DVD		9		Info		Info
	Input Blu-ray		Guide		Option		Options
	Input Aux1		0		Setup		Menu
	Input Game		Pre Ch		Back		Back
	Input Aux2	 + 	Shift + Smart		Back		Exit
	Input Media		Media		Up		Up
	Input CD		Smart		Down		Down
	Quick Select 1		D. Menu		Right		Right





Original		Rechange		Original		Rechange	
	Power		Power		Quick Select 2		Text
	Input TV Audio		1		Quick Select 3		Eject
	Input Tuner		2		Quick Select 4		AV
	Input Bluetooth		3		CH + / Page +		Ch +
	Input Phono		4		CH - / Page -		Ch -
	Input USB		5		Mute		Mute
	Input HEOS		6		Volume +		Vol +
	Input Internet Radio		7		Volume -		Vol -
	Input CBL/SAT		8		Up		Up
	Input DVD		9		Down		Down
	Input Blu-ray		Guide		Right		Right
	Input Aux1		0		Left		Left
	Input Game		Pre Ch		Enter		Ok
	Input Aux2		Shift + Smart		Back		Back
	Input Media		Media		Back		Exit
	Input CD		Smart		I<< / Tune -		I<<
	Quick Select 1		D. Menu		Play		Play





Original		Rechange		Original		Rechange	
1	Quick Select 1	E-MANUAL D.MENU	D. Menu	GAME	Input Game	FAV PRE-CH	Pre Ch
ENTER	Enter	SHIFT + FAV PRE-CH	Shift + Pre Ch	AUX2	Input Aux2	SHIFT + HOME SMART	Shift + Smart
4	Quick Select 4	TIMER AV	AV	MEDIA PLAYER	Input Media	APP MEDIA	Media
3	Quick Select 3	ZOOM ▲	Eject	CD	Input CD	HOME SMART	Smart
2	Quick Select 2	REPEAT TEXT	Text	CH / PAGE ▲	CH + / Page +	+ CH	Ch +
POWER	Power	POWER	Power	CH / PAGE ▼	CH - / Page -	CH -	Ch -
TV AUDIO	Input TV Audio	1	1	MUTE 🔇	Mute	MUTE	Mute
TUNER	Input Tuner	2	2	VOLUME ▲	Volume +	+ VOL	Vol +
Bluetooth	Input Bluetooth	3	3	VOLUME ▼	Volume -	VOL -	Vol -
PHONO	Input Phono	4	4	▲	Up	▲	Up
USB	Input USB	5	5	▼	Down	▼	Down
HEOS	Input HEOS	6	6	▶	Right	▶	Right
INTERNET RADIO	Input Internet Radio	7	7	BACK	Back	CLEAR EXIT	Exit
CBL/SAT	Input CBL/SAT	8	8	◀	Left	◀	Left
DVD	Input DVD	9	9	ENTER	Enter	OK	Ok
Blu-ray	Input Blu-ray	GUIDE	Guide	BACK	Back	RETURN BACK	Back
AUX1	Input Aux1	0	0	TUNE - ◀◀	I<< / Tune -	◀◀	I<<



