 



 
 

 

 









 
















 
 


 
 
 

 



 







 


 

 
Original	Rechange
 Power	 Power
 Mute	 Mute
 Eject	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 Shift + Guide	 Shift + Guide
 Vol+	 Vol +
 Aspect	 Format

Original	Rechange
 Nicam	 Shift + Dual
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Display	 Shift + Info
 LCD Menu	 Menu
 Exit/DVD Setup	 Exit
 Sleep	 Sleep
 Input	 AV
 Red/Prog	 Red
 Tv/Radio	 TV/R
 Green/Intro/Audio	 Green





Original	Rechange
 Yellow/Repeat/Freeze	 Yellow
 Blue/A-B	 Blue
 EPG	 Guide
 Text	 Text
 Subtitle	 Subt
 D.Menu	 D. Menu
 Title	 Options
 Zoom/Subpage	 Shift + Eject
 D.Disp	 Info
 Goto	 Shift + Pre Ch
 P.Mode	 Shift + Format
 >> /Hold	 Shift + Ch -
 Play/Fav	 Play
 Stop/FAV-	 Stop
 > /FAV+	 >>
 <<	 <<
 Audio/Lang	 Shift + Menu

Original	Rechange
 <</Index	 <<
 >>/Size	 >>
 Angle/Reveal	 Rec
 S.Mode	 Dual

