





















 











 



 



 



 



 



 



 



 



 





| Original | | Rechange | | Original | | Rechange | |
|---|------------|---|----------------------------|---|-----------|---|---------------------|
|  | Power |  | Power |  | Mute |  | Mute / Dimmer |
|  | Tv/AV |  | AV / Input / RDS |  | Vol- |  | Vol- |
|  | 1 |  | 1 |  | Up |  | Up |
|  | 2 |  | 2 |  | CH+ |  | CH+ / Page+ |
|  | 3 |  | 3 |  | Vol+ |  | Vol+ |
|  | Eject |  | Eject / Surround |  | Left |  | Left |
|  | 4 |  | 4 |  | OK |  | OK |
|  | 5 |  | 5 |  | Right |  | Right |
|  | 6 |  | 6 |  | Sys Menu |  | D.Menu / Top |
|  | Play/Pause |  | Play / Slow |  | CH- |  | CH- / Page- |
|  | 7 |  | 7 |  | Down |  | Down |
|  | 8 |  | 8 |  | Display |  | Display / Media |
|  | 9 |  | 9 |  | Picture |  | Picture / Format |
|  | Stop |  | Stop / Hold |  | Sound |  | Sound / Title |
|  | 0 |  | 0 |  | Timer |  | Sleep / Timer |
|  | -/-- |  | Shift + Guide / EPG / -/-- |  | Nicam/A2 |  | Audio / Lang I/II |
|  | Return |  | Back / Return |  | Lan/Prog- |  | Shift + CH- / Page- |





| Original | Recharge |
|-----------------------|---------------------------|
| Zoom/Prog+ | Shift + CH+ / |
| Sub | Subtitle / EQ |
| Goto | Text / Goto |
| SET/Tv/TXT/DVB- | Setup / OPT / |
| Menu/Cancel/Tv Format | Menu / Home |
| ANG/Reveal/Exit | Exit / Cancel / Clear |
| Title/info | Shift + Sound / Title |
| <</Hold/Languag | << / Tune- |
| >>/Size/Text | >> / Tune+ |
| <</Subpage | << / Preset- |
| FAV | Fav / Marker / PC |
| >> /Index | >> / Preset+ |
| EPG | Guide / EPG / -/-- |
| Red/Pro | Red / Netflix / Search |
| Tv/Radio | TV/Radio / |
| Green/Slow/Audio | Green / APP / Repeat |
| Yellow/Rep/Freeze | Yellow / YouTube / Repeat |

| Original | Recharge |
|-------------------|-----------------------------|
| Blue/A-B/Subtitle | Blue / Prime Video / Random |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

