



Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Sleep	 Sleep / Timer
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 I/II	 Audio / Lang I/II
 PR+	 CH+ / Page+

Original	Recharge
 Vol-	 Vol-
 Input	 AV / Input / RDS
 PR-	 CH- / Page-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Favourite	 Fav / Marker / PC
 FAV-	 Shift + CH- /
 FAV+	 Shift + CH+ /
 Info	 Info / Angle
 P-Mode	 Picture / Format
 S-Mode	 Sound / Title
 ARC	 Display / Media





Original	Recharge
 EPG	 Guide / EPG / -/--
 Text	 Text / Goto
 Mix	 Shift + Text /
 Size	 Zoom / Size
 Reveal	 D.Menu / Top
 Hold	 Stop / Hold
 Index	 Smart / List
 S.Page	 Eject / Surround
 S.TITL	 Subtitle / EQ
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Recharge






Original	Recharge	
Update	 + 	Shift + D.Menu / Top Menu
Aft/Caf	 + 	Shift + AV / Input / RDS
Reveal		Setup / OPT /
Off/Tim		Eject / Surround
Game Coo		Smart / List
2.Fav P/C 2.		Fav / Marker / PC
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--

Original	Recharge	
0/10		0
Menu audio		Audio / Lang I/II
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Color+ P.Std		Picture / Format
Color- S.Std		Sound / Title
Audio+	 + 	Shift + Vol+
Tune-		<< / Tune-
Tune+		>> / Tune+
Menu		Menu / Home
Mute		Mute / Dimmer
Info		Info / Angle
Subt.List		Subtitle / EQ
Txt Stop		Stop / Hold
Sleep Timer		Sleep / Timer



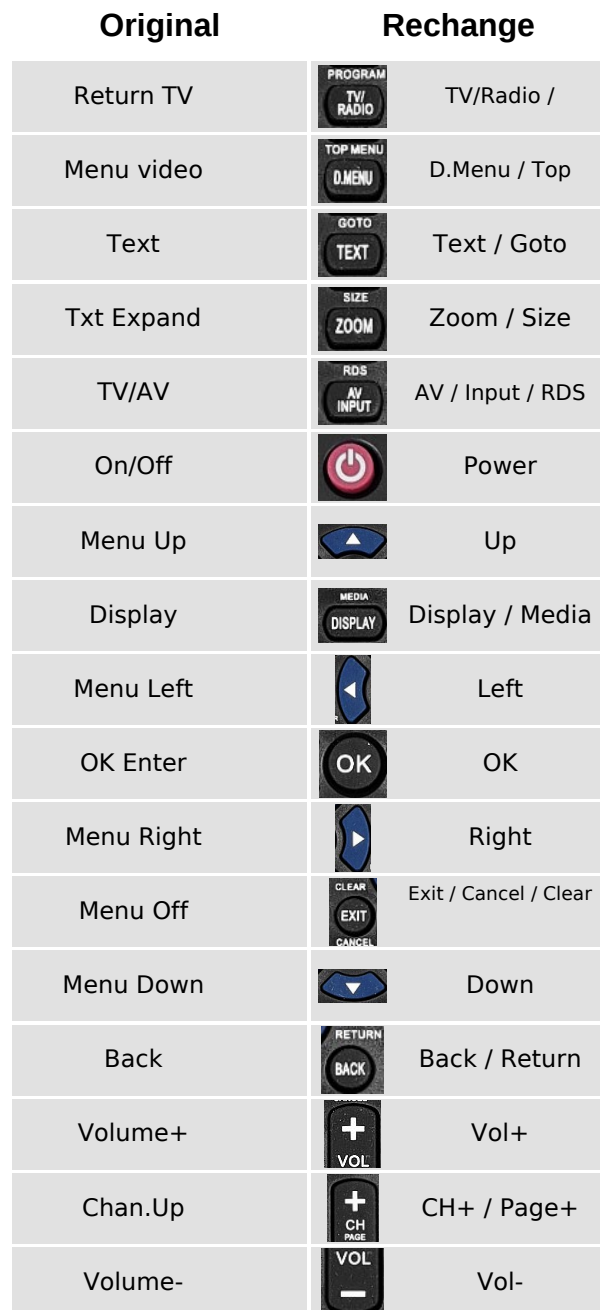



Original	Recharge	
On/Off		Power
Mute		Mute / Dimmer
Update		Play / Slow
Reveal		Pause / Step / Freeze
Txt Stop		Stop / Hold
Color- S.Std		Sound / Title
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Color+ P.Std		Picture / Format
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top
On/Tim		Setup / OPT /
Text		Text / Goto
TV/AV		AV / Input / RDS
Menu		Menu / Home

Original	Recharge	
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4





Original	Recharge	
5	 5	5
6	 6	6
7	 7	7
8	 8	8
9	 9	9
Guide -/-- 1.	 Guide / EPG / -/--	
0/10	 0	0
2.Fav P/C 2.	 Fav / Marker / PC	
Red	 Red / Netflix / Search	
Green	 Green / APP / Repeat	
Yellow	 Yellow / YouTube / Repeat	
Blue	 Blue / Prime Video / Random	
Audio+	 +  Shift + Vol+	

Original	Recharge

