





Original		Rechange		Original		Rechange	
	Power		Power		Return		Back
	Program		Sleep		Angle		Exit
	Subtitle/Copy		Subt		USB/Card		Smart
	Open/Close		Eject		Up		Up
	Display		Shift + Info		Down		Down
	Step		List		Right		Right
	↔/A-B		3D		Left		Left
	Repeat		Shift + Text		Enter		Ok
	V-Mode		Format		Menu		Menu
	N/P		D. Menu		Play		Play
	PBC		Shift + TV/R		Pause		Pause
	Zoom		Shift + Eject		Stop/PVR		Stop
	Text/Title		Text		EPG		Guide
	DVD/DVB		AV		Info		Info
	Tv/Radio		TV/R		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	Setup		Options		Mute		Mute





Original		Recharge		Original		Recharge	
	1		1		Green		Green
	2		2		Yellow		Yellow
	3		3		Blue/FAV		Blue
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	10		0				
	10+		Pre Ch				
	Goto		Media				
	<</Rev		<<				
	>>/Fwd		>>				
	I<</Prev		I<<				
	>>I/Next		>>I				
	Red		Red				

