






 


 

 

 

 
 
 
 
 










Original		Rechange		Original		Rechange	
	Power		Power		P:P		Pre Ch
	Mute		Mute		EPG		Guide
	HDMI		AV		Vol+		Vol +
	FAV		Shift + Pre Ch		Vol-		Vol -
	Tv/Radio		TV/R		CH+		Ch +
	1		1		CH-		Ch -
	2		2		Info		Info
	3		3		Exit		Exit
	4		4		Menu		Menu
	5		5		Back		Back
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		OK		Ok
	Media		Media		Rec		Rec
	LIB		Smart		Play		Play





	Original	Recharge	Original	Recharge
	Stop			
	<<			
	Pause			
	>>			
	Text			
	Subt.			
	Audio			
	Opt.			
	Red			
	Green			
	Yellow			
	Blue			

