



 



Original	Recharge
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
*(Left)	Shift + Left
0	0
*(Right)	Shift + Right
[]/Picture	Picture / Format
/j/Sound	Sound / Title
I-II	Audio / Lang I/II

Original	Recharge
Menu	Menu / Home
Up/PR+	Up
PR+	CH+ / Page+
List	Smart / List
Vol-	Vol-
Left	Left
OK	OK
Right	Right
Vol+	Vol+
Sleep	Sleep / Timer
Down/PR-	Down
PR-	CH- / Page-
P<P	Back / Return
Tv/AV	AV / Input / RDS
Tv/PC	TV/Radio /
[<>]/ARC	Shift + Picture / Format
Red	Red / Netflix / Search





Original	Recharge
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [=]/Text	 Text / Goto
 [.=]/Mix	 Shift + Text /
 [=♦]/Size	 Zoom / Size
 [=i]/Index	 Info / Angle
 [=x]/Update	 Rec / Rec Mode
 [=o]/Time	 Pause / Step / Freeze
 [=?]/Reveal	 Play / Slow
 [=+]/Hold	 Stop / Hold
 [■]/PIP	 Display / Media
 [:■]/Input	 Shift + AV / Input / RDS
 [/■]/Swap	 Shift + Back / Return
 PIP PR+	 Shift + CH+ /
 [-■]/Position	 Shift + Display / Media
 [=≡]/Mode	 Shift + Smart / List

Original	Recharge
 *(Down)	 Shift + Down
 PIP PR-	 Shift + CH- /

