



Original	Rechange
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
*(Left)	Shift + Left
0	0
*(Right)	Shift + Right
[ ]/Picture	Picture / Format
/j/Sound	Sound / Title
I-II	Audio / Lang I/II

Original	Rechange
Menu	Menu / Home
Up/PR+	Up
PR+	CH+ / Page+
List	Smart / List
Vol-	Vol-
Left	Left
OK	OK
Right	Right
Vol+	Vol+
Sleep	Sleep / Timer
Down/PR-	Down
PR-	CH- / Page-
P<P	Back / Return
Tv/AV	AV / Input / RDS
Tv/PC	TV/Radio /
[<>]/ARC	Shift + Picture / Format
Red	Red / Netflix / Search





Original	Recharge
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[≡]/Text	Text / Goto
[≡.]/Mix	Shift + Text /
[≡♦]/Size	Zoom / Size
[≡i]/Index	Info / Angle
[≡x]/Update	Rec / Rec Mode
[≡o]/Time	Pause / Step / Freeze
[≡?]/Reveal	Play / Slow
[≡+]/Hold	Stop / Hold
[■]/PIP	Display / Media
[ :■]/Input	Shift + AV / Input / RDS
[ /■]/Swap	Shift + Back / Return
PIP PR+	Shift + CH+ /
[-■]/Position	Shift + Display / Media
[≡.]/Mode	Shift + Smart / List

Original	Recharge
*(Down)	Shift + Down
PIP PR-	Shift + CH- /

