 


 
 
 
 
 
 

 


 

 

 

 

 

 
 


 
 
 
 


 






 
 



 

 









| Original | | Recharge | | Original | | Recharge | |
|---|---------------|---|-------|---|--------------|---|----------------|
|  | Power |  | Power |  | 8 |  | 8 |
|  | Mute |  | Mute |  | 9 |  | 9 |
|  | Vol+ |  | Vol + |  | 0 |  | 0 |
|  | Vol- |  | Vol - |  | -/-- |  | Shift + Guide |
|  | Prog+ |  | Ch + |  | PRE |  | Pre Ch |
|  | Prog- |  | Ch - |  | Up/P+ |  | Up |
|  | [≡]/TXT |  | Text |  | Down/P- |  | Down |
|  | [+]/Display |  | Info |  | Right/Vol+ |  | Right |
|  | Tv/DVB-T |  | Smart |  | Left/Vol- |  | Left |
|  | []/Line |  | Media |  | [II]/Tv Menu |  | Menu |
|  | 1 |  | 1 |  | -IXI-/Exit |  | Exit |
|  | 2 |  | 2 |  | Timer/Sleep |  | Shift + Power |
|  | 3 |  | 3 |  | -I/I-/P.STD |  | Shift + Format |
|  | 4 |  | 4 |  | -I/I-/S.STD |  | Shift + Dual |
|  | 5 |  | 5 |  | [<>]/P.Size |  | Format |
|  | 6 |  | 6 |  | Open/Close |  | Eject |
|  | 7 |  | 7 |  | Rec |  | Rec |





| Original | Rechange | Original | Rechange |
|--|---|---|---|
|  Stop |  Stop |  [/≡]/Audio |  SOUND DUAL Dual |
|  Play |  PLAY MODE Play |  [≡♦]/Subtitle |  AD SUBT Subt |
|  Pause |  Pause |  [≡?]/Goto |  SETTINGS OPT Options |
|  <</< Slow |  << << |  [≡+]/Program/Me |  SEARCH TV/R TV/R |
|  Slow >/>> |  >> >> |  [<≡]/List/Angle |  SHIFT + CH - Shift + Ch - |
|  <</< Step |  <<< << |  [≡>]/Bookmark/O |  SHIFT + CH + Shift + Ch + |
|  Step >/>> |  >>> >> |  [≡o]/Zoom/EPG |  GUIDE Guide |
|  Red/Setup |  A Red |  [≡X]/Cancel/i |  ECO 3D 3D |
|  Green/Input |  B Green |  MS |  RETURN BACK Back |
|  Yellow/Title |  C Yellow |  [▼]/Still |  TIMER AV AV |
|  Blue/Menu |  D Blue |  ENTER OK |  OK Ok |
|  PIP On/Off |  SHIFT + ECO 3D Shift + 3D | | |
|  PIP Source |  SHIFT + TIMER AV Shift + AV | | |
|  PIP Sound |  SHIFT + SEARCH TV/R Shift + TV/R | | |
|  PIP Swap |  SHIFT + AD SUBT Shift + Subt | | |
|  Timer/repeat |  SHIFT + REPEAT TEXT Shift + Text | | |
|  [≡i]/A-B |  SHIFT + DISPLAY INFO Shift + Info | | |

