



 










 



 
 







 

 







 




	Original	Recharge		Original	Recharge
	Power		Power		0
	Up		Up		Guide
	Down		Down		Back
	Right		Right		Ch +
	Left		Left		Ch -
	OK		Ok		Pre Ch
	M		Menu		Vol +
	[i]		Info		Vol -
	1		1		Mute
	2		2		Dual
	3		3		TV/R
	4		4		AV
	5		5		Red
	6		6		Green
	7		7		Yellow
	8		8		Blue
	9		9		Text





Original	Recharge	Original	Recharge
[≡o]	Smart		
[≡+]	Format		
[≡x]/[· ·]	3D		
[ /≡]/[ *]	Subt		
[≡◆]/[+]	Options		
[≡?]/PC	Media		
[≡i]	List		

