



Original		Rechange		Original		Rechange	
	Power		Power		Dev.List		Display / Media
	Mute		Mute / Dimmer		EPG		Guide / EPG / -/-
	1		1		Subtitle		Subtitle / EQ
	2		2		Text		Text / Goto
	3		3		Auto		Setup / OPT /
	Lang		Audio / Lang I/II		Menu		Menu / Home
	4		4		Zoom		Zoom / Size
	5		5		Info		Info / Angle
	6		6		Exit		Exit / Cancel / Clear
	Time Shift		D.Menu / Top		Up		Up
	7		7		CH+		CH+ / Page+
	8		8		Left		Left
	9		9		Vol-		Vol-
	Tv/Radio		TV/Radio /		OK		OK
	FAV		Fav / Marker / PC		Right		Right
	0		0		Vol+		Vol+
	Recall		Back / Return		CH-		CH- / Page-



