





| Original | Recharge | Original | Recharge |
|--|---|--|---|
|  POWER |  Power |  9 wxyz |  9 |
|  ←○ |  Shift + Smart / List |  TV |  TV/Radio / |
|  **/0 |  Shift + Display / Media |  0 |  0 |
|  **²/♀ |  Shift + Red / Netflix / |  ↔ |  Shift + Back / Return |
|  SOURCE |  AV / Input / RDS |  TV GUIDE |  Guide / EPG / -/- |
|  PRESETS |  Smart / List |  [≡] |  Text / Goto |
|  ≡≡≡ |  Setup / OPT / |  MENU |  Menu / Home |
|  🎵/😊/📺 |  Display / Media |  Q.MENU |  D.Menu / Top |
|  SLEEP |  Sleep / Timer |  UP |  Up |
|  1 . / @ |  1 |  LEFT |  Left |
|  2 abc |  2 |  OK |  OK |
|  3 def |  3 |  RIGHT |  Right |
|  4 ghi |  4 |  DOWN |  Down |
|  5 jkl |  5 |  BACK |  Back / Return |
|  6 mno |  6 |  →📺← |  Picture / Format |
|  7 pqrs |  7 |  EXIT |  Exit / Cancel / Clear |
|  8 tuv |  8 |  *FAV |  Fav / Marker / PC |





| Original | Recharge |
|--|---|
|  VOL+ |  Vol+ |
|  MUTE |  Mute / Dimmer |
|  P+ |  CH+ / Page+ |
|  VOL- |  Vol- |
|  INFO |  Info / Angle |
|  P- |  CH- / Page- |
|  REC |  Rec / Rec Mode |
|  PLAY |  Play / Slow |
|  PAUSE |  Pause / Step / Freeze |
|  STOP |  Stop / Hold |
|  LANG. |  Audio / Lang I/II |
|  <<< |  <<< / Tune- |
|  >>> |  >>> / Tune+ |
|  [≡]... |  Sound / Title |
|  RED |  Red / Netflix / Search |
|  GREEN |  Green / APP / Repeat |
|  YELLOW |  Yellow / YouTube / Repeat |

| Original | Recharge |
|--|---|
|  BLUE |  Blue / Prime Video / Random |

