 

 

 

 

 

 
 
 
 








Original		Rechange		Original		Rechange	
	POWER		Power		GUIDE		Guide
	TV/Radio		TV/R		FAV		Pre Ch
	EXIT		Exit		OK		Ok
	MENU		Menu		UP		Up
	AUDIO		Dual		DOWN		Down
	MUTE		Mute		RIGHT		Right
	TEXT		Text		LEFT		Left
	1		1		VOL+		Vol +
	2		2		VOL-		Vol -
	3		3		CH+		Ch +
	4		4		CH-		Ch -
	5		5		SLEEP		Sleep
	6		6		BACK		Back
	7		7		RED		Red
	8		8		GREEN		Green
	9		9		YELLOW		Yellow
	0		0		BLUE		Blue





Original	Rechange	Original	Rechange
	↑		Shift + Ch +
	↓		Shift + Ch -
	A - B		I<<
	STEP		>>I
	STOP		Stop
	PAUSE		Pause
	REC		Rec
	REW		<<
	PLAY		Play
	FWD		>>
	SUBTITLE		Subt
	V-FORMAT		Format
	INFO		Info
	OPTION		Options
	PLAYLIST		Media
	LIST		List
	TIME		AV
			BOOK
			Smart

