
 


















 

 













| Original | Rechange | Original | Rechange |
|------------|--|------------|---|
| On/Off |  Power | Menu |  Menu / Home |
| Audio Off |  Mute / Dimmer | Menu Up |  Up |
| Play |  Play / Slow | Angle |  Info / Angle |
| Stop |  Stop / Hold | Menu Left |  Left |
| Record |  Rec / Rec Mode | OK Enter |  OK |
| Rewind |  << / Tune- | Menu Right |  Right |
| F.Forward |  >> / Tune+ | Menu Down |  Down |
| Prev. |  I<< / Preset- | Return |  Back / Return |
| Next |  >>I / Preset+ | Volume+ |  Vol+ |
| Audio |  Audio / Lang I/II | Slow Up |  CH+ / Page+ |
| Subt. |  Subtitle / EQ | Volume- |  Vol- |
| Open/Close |  Eject / Surround | Display |  Display / Media |
| Zoom |  Zoom / Size | 1 |  1 |
| Progr. |  TV/Radio / | 2 |  2 |
| Top Menu |  D.Menu / Top | 3 |  3 |
| Setup |  Setup / OPT / | 4 |  4 |
| C/CH |  AV / Input / RDS | 5 |  5 |



