
 



 



 






 


 






 
 

 





| Original | Rechange |
|--|---|
|  Power |  Power |
|  DTV/ATV |  Display / Media |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  -/- |  Shift + Guide / EPG / -/- |
|  Recall |  Back / Return |
|  P.Mode |  Picture / Format |
|  S.Mode |  Sound / Title |
|  Aspect |  Zoom / Size |

| Original | Rechange |
|---|--|
|  Menu |  Menu / Home |
|  Source |  AV / Input / RDS |
|  Exit |  Exit / Cancel / Clear |
|  i |  Info / Angle |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  OK |
|  V+ |  Vol+ |
|  V- |  Vol- |
|  Mute |  Mute / Dimmer |
|  MTS |  Eject / Surround |
|  Timer |  Sleep / Timer |
|  P+ |  CH+ / Page+ |
|  P- |  CH- / Page- |
|  Red |  Red / Netflix / Search |



