



Original		Rechange		Original		Rechange	
	Power		Power		8		8
	Mute		Mute / Dimmer		9		9
	Play		Play / Slow		0		0
	Pause		Pause / Step / Freeze		Info		Info / Angle
	Stop		Stop / Hold		EPG		Guide / EPG / -/-
	Rec		Rec / Rec Mode		≡		Menu / Home
	<<		<< / Tune-		Source		AV / Input / RDS
	I<<		I<< / Preset-		Up		Up
	>>I		>>I / Preset+		Down		Down
	>>		>> / Tune+		Right		Right
	1		1		Left		Left
	2		2		OK		OK
	3		3		Exit		Exit / Cancel / Clear
	4		4		Smart		Smart / List
	5		5		←		Back / Return
	6		6		Vol+		Vol+
	7		7		P+		CH+ / Page+





Original	Rechange	Original	Rechange
 Vol-	 Vol-		
 Home	 Shift +  Menu /		
 P-	 CH- / Page-		
 Netflix	 Shift +  Red /  Netflix /		
 You Tube	 Shift +  Yellow /  YouTube /		
 Red	 Red / Netflix /  Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube /  Repeat		
 Blue	 Blue / Prime Video /  Random		
 O)/	 Audio / Lang I/II		
 [≡]	 Text / Goto		
 Subt.	 Subtitle / EQ		

