



Original		Recharge		Original		Recharge	
	Power		Power		0		0
	Eject		Eject / Surround		Pair		Guide / EPG / -/-
	CD		Shift + 3		Pause		Pause / Step / Freeze
	FM		Shift + 6		Scan		Fav / Marker / PC
	Opti/Coax		Setup / OPT /		<<		<< / Tune-
	Audio/AUX		Audio / Lang I/II		Play		Play / Slow
	1		1		>>		>> / Tune+
	2		2		Mute		Mute / Dimmer
	3		3		Stop		Stop / Hold
	BT		Shift + 9		Repeat		Green / APP / Repeat
	4		4		V+		Vol+
	5		5		Clock		Zoom / Size
	6		6		P >> I		>> I / Preset+
	USB		Shift + 8		V-		Vol-
	7		7		Timer		Shift + Sleep / Timer
	8		8		I << P		I << / Preset-
	9		9		User		Shift + Display / Media





Original	Recharge	Original	Recharge
NORMAL Normal	Prime Video RANDOM Blue / Prime Video / Random		
.CLASS Class	YouTube REPEAT A-B Yellow / YouTube / Repeat		
POP Pop	SHIFT + LIST SMART Shift + Smart / List		
ROCK Rock	NETFLIX SEARCH Red / Netflix / Search		
JAZZ Jazz	LIST SMART Smart / List		
SLEEP Sleep	TIMER SLEEP Sleep / Timer		
BASS- Bass-	SHIFT + VOL- Shift + Vol-		
BASS+ Bass+	SHIFT + VOL+ Shift + Vol+		
DISPLAY Display	MEDIA DISPLAY Display / Media		
TREBLE- Treble-	CH PAGE- CH- / Page-		
TREBLE+ Treble+	CH PAGE+ CH+ / Page+		

Original	Recharge

