











 







 



 



 



 









 
 








 











 







Original		Rechange		Original		Rechange	
	Power		Power		Recall		Back / Return
	Mute		Mute / Dimmer		Vol -		Vol-
	V.Format		Shift + Picture / Format		Vol +		Vol+
	Sleep		Sleep / Timer		CH -		CH- / Page-
	Text		Text / Goto		CH +		CH+ / Page+
	TV / Radio		TV/Radio /		Menu		Menu / Home
	1		1		Up		Up
	2		2		Exit		Exit / Cancel / Clear
	3		3		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		Page Down		Shift + CH- /
	7		7		Down		Down
	8		8		Page Up		Shift + CH+ /
	9		9		FAV		Fav / Marker / PC
	[[≡]]		Smart / List		Guide		Guide / EPG / -/-
	0		0		Info		Info / Angle





Original	Recharge
	Display / Media
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Audio / Lang I/II
	Blue / Prime Video / Random
	Subtitle / EQ
	Play / Slow
	Stop / Hold
	Pause / Step / Freeze
	Rec / Rec Mode
	Shift + Text /
	Shift + Pause / Step /
	<< / Tune-
	>> / Tune+
	Zoom / Size
	Shift + Stop /

Hold

Original	Recharge
	I<< / Preset-
	>>I / Preset+
	Shift + 0
	Picture / Format
	Setup / OPT /
	Shift + Setup / OPT / Tools

