











 







 



 



 



 









 
 








 











 







Original	Rechange	Original	Rechange
 Power	 Power	 Recall	 Back / Return
 Mute	 Mute / Dimmer	 Vol -	 Vol-
 V.Format	 Shift + Picture / Format	 Vol +	 Vol+
 Sleep	 Sleep / Timer	 CH -	 CH- / Page-
 Text	 Text / Goto	 CH +	 CH+ / Page+
 TV / Radio	 TV/Radio /	 Menu	 Menu / Home
 1	 1	 Up	 Up
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 Page Down	 Shift + CH- /
 7	 7	 Down	 Down
 8	 8	 Page Up	 Shift + CH+ /
 9	 9	 FAV	 Fav / Marker / PC
 [[≡]]	 Smart / List	 Guide	 Guide / EPG / -/--
 0	 0	 Info	 Info / Angle





Original	Recharge
	Display / Media
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Audio / Lang I/II
	Blue / Prime Video / Random
	Subtitle / EQ
	Play / Slow
	Stop / Hold
	Pause / Step / Freeze
	Rec / Rec Mode
	Shift + Text /
	Shift + Pause / Step /
	<< / Tune-
	>> / Tune+
	Zoom / Size
	Shift + Stop /

Hold

Original	Recharge
	I<< / Preset-
	>>I / Preset+
	Shift + 0
	Picture / Format
	Setup / OPT /
	Shift + Setup / OPT / Tools

