









 

 

 







 

 







 



 

 

 







 

 





 



 



 







Original		Rechange		Original		Rechange	
	Power		Power		--		Guide / EPG / -/--
	Up / P+		Up		0		0
	Up / P+		CH+ / Page+		P < P		Fav / Marker / PC
	Menu		Menu / Home		PP		Back / Return
	Left		Left		Vol+		Vol+
	Right		Right		I-II		Audio / Lang I/II
	Down / P-		Down		Mute		Mute / Dimmer
	Down / P-		CH- / Page-		Vol-		Vol-
	1		1		Info		Info / Angle
	2		2		Red		Red / Netflix / Search
	3		3		Green		Green / APP / Repeat
	4		4		Yellow		Yellow / YouTube / Repeat
	5		5		Blue		Blue / Prime Video / Random
	6		6		[TV]		Shift + 1
	7		7		[TV]		TV/Radio /
	8		8		[AV]		AV / Input / RDS
	9		9		[≡]		Text / Goto





Original

Rechange













 





 







 
 
 

 



 



 

 



 







 

 





 



 



	[≡⊕]		Subtitle / EQ
	[/≡]		Picture / Format
	[≡X]		Exit / Cancel / Clear
	[≡⇕]		Zoom / Size
	[≡?]		Display / Media
	[≡i]		Smart / List

Original

Rechange





Original		Rechange		Original		Rechange	
	Power		Power		9		9
	Up / P+		Up		+10		Guide / EPG / -/-
	Up / P+		CH+ / Page+		0		0
	Menu		Menu / Home		Repeat		Green / APP / Repeat
	Left		Left		Search		Red / Netflix / Search
	Select		OK		A→B		Yellow / YouTube / Repeat
	Right		Right		Display		Display / Media
	Down / P-		CH- / Page-		Audio		Audio / Lang I/II
	Down / P-		Down		Subtitle		Subtitle / EQ
	1		1		Zoom		Zoom / Size
	2		2		Prog		TV/Radio /
	3		3		C		Blue / Prime Video / Random
	4		4		Angle		Info / Angle
	5		5		Return		Back / Return
	6		6		Time		Sleep / Timer
	7		7		<<		<< / Tune-
	8		8		>>		>> / Tune+







































	Original	Recharge	Original	Recharge
		I<< / Preset-		
		>>I / Preset+		
		Play / Slow		
		Pause / Step / Freeze		
		Stop / Hold		
	Title	Sound / Title		
	Open / Close	Eject / Surround		






 


Original	Recharge	
On/Off		Power
Mute		Mute / Dimmer
Txt Stop		Stop / Hold
Tone+		>> / Tune+
Lang		Sound / Title
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top
Text		Text / Goto
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK

Original	Recharge	
Menu Right		Right
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9





Original	Recharge	Original	Recharge
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Lang	 Shift + Audio / Lang I/II		

Original	Recharge

