
 
 
 

 
 
 





 
 
 
 
 
 
 
 

 
 

 
 
 
 
 
 

 
 
 
 






Original	Recharge
 Power	 Power
 Source Search	 Source
 Enter	 Enter
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Menu	 Menu
 ESC	 Shift + Menu
 Vol+	 Page  Vol
 Vol-	 Page  Vol
 Help	 Info
 Freeze	 Timer Freeze
 A/V Mute	 Mute Blank
 Auto	 Auto
 User	 Shift + Mode
 Aspect	 Eco Aspect

Original	Recharge
 E-Zoom+	 Play + / Play
 Pointer	 Shift + Auto
 E-Zoom-	 Stop - / Stop
 Color Mode	 Mode
 Page Up	 Shift + 
 Page Down	 Shift + 
 USB	 Focus Volt / Focus
 Computer	 Video Comp / Video
 Video	 Shift + Video Comp / Video
 LAN	 Invert 3D / Invert
 1	 Shift + Page  Vol / Page +
 2	 Shift + Play + / Play
 3	 Shift + Focus Volt / Focus
 4	 Shift + Page  Vol / Page -
 5	 Shift + Stop - / Stop
 6	 Shift + Info Help / Help
 7	 Shift + Eco Aspect / Aspect



