

 

 




 

 

 





 



 


 


 
 








 

 

 

 

 





 

 

 



 

 
 
 






Original		Rechange		Original		Rechange	
	Power		Power		4		4
	OK		Ok		5		5
	Up		Up		6		6
	Down		Down		7		7
	Right		Right		8		8
	Left		Left		9		9
	Menu		Menu		0		0
	Mute		Mute		P<P		Pre Ch
	> <		Smart		[i+]		Info
	[≡]		Text		[12]		Options
	P+		Ch +		[-O-]/Active Control		Media
	P-		Ch -		[<>]		Format
	Vol+		Vol +		Source		AV
	Vol-		Vol -		(O)		TV/R
	1		1		Red		Red
	2		2		Green/Timer		Green
	3		3		Yellow/[]		Yellow





 









 


 







 



 



 

 

 



 
 
 

 
 

 

 
 

 

 

 


 
 







 


Original	Rechange
 Blue/[...]	 Blue
 Rec	 Rec
 <<	 <<
 Stop	 Stop
 Play	 Play
 >>	 >>
 [[I]]	 Guide
 Power AMP	 Shift + Power
 [=] AMP	 Shift + Text
 [[I]] AMP	 Shift + Guide
 OK AMP	 Shift + Ok
 Up AMP	 Shift + Up
 Down AMP	 Shift + Down
 Right AMP	 Shift + Right
 Left AMP	 Shift + Left
 Menu AMP	 Shift + Menu
 P+ AMP	 Shift + Ch +

Original	Rechange
 P- AMP	 Shift + Ch -
 Mute AMP	 Shift + Mute
 Vol+ AMP	 Shift + Vol +
 Vol- AMP	 Shift + Vol -
 1 AMP	 Shift + 1
 2 AMP	 Shift + 2
 3 AMP	 Shift + 3
 4 AMP	 Shift + 4
 5 AMP	 Shift + 5
 6 AMP	 Shift + 6
 7 AMP	 Shift + 7
 8 AMP	 Shift + 8
 9 AMP	 Shift + 9
 0 AMP	 Shift + 0
 P<P AMP	 Shift + Pre Ch
 >> AMP	 Shift + >>
 << AMP	 Shift + <<





Original		Rechange		Original		Rechange	
	Power		Power		P-		Ch -
	Source		AV		Vol+		Vol +
	>>		>>		Vol-		Vol -
	<<		<<		1		1
	Stop		Stop		2		2
	Play		Play		3		3
	[[[]]]		Guide		4		4
	[[]]		Text		5		5
	OK		Ok		6		6
	Up		Up		7		7
	Down		Down		8		8
	Right		Right		9		9
	Left		Left		0		0
	> <		Smart		[i+]		Info
	Menu		Menu		P<P		Pre Ch
	Mute		Mute		[1 2]		Options
	P+		Ch +		[-O-]/Active Control		Media






 
 
 
 
 
 
 
 


 
 
 


 
 
 

 
 
 


 





 









 

 

 

 
 



 




 

 
 


 




Original	Recharge	Original	Recharge
	 [<>]		
	 PICTURE FORMAT Format		

 

 












 

 
 

 
 

 





Original	Rechange	Original	Rechange
	Power		Power
	Source		AV
	(O		TV/R
	Red		Red
	Green/Timer		Green
	Yellow/[]		Yellow
	Blue/[...]		Blue
	>>		>>
	Rec		Rec
	<<		<<
	Stop		Stop
	Play		Play
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	> <		Smart
	Menu		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0



 

 


 
 





 

 

 

 
 
 





 


 


 
 





 

 








 







Original		Recharge		Original		Recharge	
	[i+]		Info		> < VCR		Shift + Smart
	P<P		Pre Ch		Menu VCR		Shift + Menu
	[1 2]		Options		P+ VCR		Shift + Ch +
	[-O-]/Active Control		Media		P- VCR		Shift + Ch -
	[<>]		Format		1 VCR		Shift + 1
	Power VCR		Shift + Power		2 VCR		Shift + 2
	Source VCR		Shift + AV		3 VCR		Shift + 3
	Rec VCR		3D		4 VCR		Shift + 4
	>> VCR		Shift + >>		5 VCR		Shift + 5
	<< VCR		Shift + <<		6 VCR		Shift + 6
	Stop VCR		Shift + Stop		7 VCR		Shift + 7
	Play VCR		Shift + Play		8 VCR		Shift + 8
	OK VCR		Shift + Ok		9 VCR		Shift + 9
	Up VCR		Shift + Up		0 VCR		Shift + 0
	Down VCR		Shift + Down		[i+] VCR		Shift + Info
	Right VCR		Shift + Right		P<P VCR		Shift + Pre Ch
	Left VCR		Shift + Left				





Original		Rechange		Original		Rechange	
	Power		Power		2		2
	>>		>>		3		3
	<<		<<		4		4
	Stop		Stop		5		5
	Play		Play		6		6
	[[I]]		Guide		7		7
	Up		Up		8		8
	Down		Down		9		9
	Right		Right		0		0
	Left		Left		[i+]		Info
	>I<		Smart		P<P		Pre Ch
	Mute		Mute				
	Vol+		Vol +				
	Vol-		Vol -				
	P+		Ch +				
	P-		Ch -				
	1		1				

