





Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Red/Rec/Instant		Red		Vol+		Vol +
	Green/<<		Green		Vol-		Vol -
	Yellow/Stop		Yellow		Mute		Mute
	Blue/play		Blue		P+		Ch +
	White/>>/□		>>		P-		Ch -
	>◆		D. Menu		1		1
	[   ]		Guide		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[◆]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch









Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/<<		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/>>/□		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[♦]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual









Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/<<		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/>>/□		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[♦]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual



