 







 





 
 


 




 



 

 






 




Original	Recharge
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+	 Vol+
 Vol-	 Vol-
 Left	 Left
 Right	 Right
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Original	Recharge
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 Play/Pause	 Pause / Step / Freeze
 I>/Resume	 Shift + Play /
 Surround	 Eject / Surround
 Sound	 Sound / Title
 Night	 Shift + Sleep / Timer
 Mute	 Mute / Dimmer
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Sleep	 Sleep / Timer
 DIM	 Shift + Mute / Dimmer
 Subw +	 Up
 Rear +	 Shift + CH+ /
 Center +	 CH+ / Page+
 Tv Vol+	 Shift + Vol+
 Subw -	 Down









 

Original	Recharge
Rear -	Shift + CH- /
Center -	CH- / Page-
Tv Vol-	Shift + Vol-

Original	Recharge





Original	Recharge
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Disc (DVD)	 D.Menu / Top
 0	 0
 Vol+	 Vol+
 System (DVD)	 Menu / Home
 Vol-	 Vol-
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Original	Recharge
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 I>/Resume	 Shift + Play /





Original	Recharge
Standby	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down

Original	Recharge





Original	Recharge
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Recharge

