










 
 

 

 

 
 
 



 



 
 


 
 



 




 
 


 




 




 
















Original	Rechange	Original	Rechange
 Power	 Power	 8	 8
 Mute	 MUTE	 9	 9
 Audio	 Audio	 0	 0
 N/P	 V-FOR	 10+	 -/-- / EPG
 Subtitle	 Subt.	 Setup	 VOD
 Zoom	 WIDE	 Down	 DOWN
 Angle	 BACK	 Up	 UP
 Program	 OPT+	 Right	 RIGHT
 Display	 INFO	 Left	 LEFT
 Step	 SRC	 Enter	 OK
 1	 1	 Repeat	 TEXT
 2	 2	 AB	 TV/R
 3	 3	 Menu	 MENU
 4	 4	 PBC	 P/C / FAV
 5	 5	 Stop	 Stop
 6	 6	 <<	 Rewind
 7	 7	 >>	 Fast Forward





Original		Recharge		Original		Recharge	
	<<		First				
	>>		Last				
	Play		Play				
	Pause		Pause				

