 






 















































Original		Rechange		Original		Rechange	
	Standby		Power		CH+		CH+ / Page+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		Zoom/Aspect		Shift + Zoom /
	2		2		Zoom/Aspect		Picture / Format
	3		3		CH-		CH- / Page-
	4		4		Menu		Menu / Home
	5		5		Up		Up
	6		6		Exit		Exit / Cancel / Clear
	7		7		Left		Left
	8		8		OK/Enter		OK
	9		9		Right		Right
	Recall		Back / Return		Sleep		Sleep / Timer
	0		0		Down		Down
	List		Smart / List		Source		AV / Input / RDS
	Vol+		Vol+		Red		Red / Netflix / Search
	Info/Display		Display / Media		Green		Green / APP / Repeat
	Info/Display		Info / Angle		Yellow		Yellow / YouTube / Repeat



