 

 



 

 

 

 

 

 

 

 

 
 

 


 



 





| Original   | Rechange   |
|--|--|
|  Standby  |  Power                        |
|  Auto     |  Smart / List                 |
|  Mute     |  Mute / Dimmer                |
|  1        |  1                            |
|  2        |  2                            |
|  3        |  3                            |
|  4        |  4                            |
|  5        |  5                            |
|  6        |  6                            |
|  7       |  7                           |
|  8      |  8                          |
|  9      |  9                          |
|  -/--   |  Shift + Guide / EPG / -/-- |
|  0      |  0                          |
|  Recall |  Back / Return              |
|  Vol+   |  Vol+                       |
|  Aspect |  Shift + Picture / Format   |

| Original   | Rechange  |
|--|---|
|  Audio    |  Audio / Lang I/II       |
|  CH+      |  CH+ / Page+             |
|  Vol-     |  Vol-                    |
|  Display  |  Display / Media         |
|  CH-      |  CH- / Page-             |
|  Up       |  Up                      |
|  Left     |  Left                    |
|  OK       |  OK                      |
|  Right    |  Right                   |
|  Menu    |  Menu / Home            |
|  Down   |  Down                  |
|  Exit   |  Exit / Cancel / Clear |
|  Input  |  AV / Input / RDS      |
|  P.Mode |  Picture / Format      |
|  S.Mode |  Sound / Title         |
|  Sleep  |  Sleep / Timer         |
|  FAV    |  Fav / Marker / PC     |





| Original | Recharge  |
|----------|---|
| FAV-     | SHIFT + CH PAGE → Shift + CH- /                 |
| FAV+     | SHIFT + CH PAGE ← Shift + CH+ /                 |
| EPG      | GUIDE EPG → Guide / EPG / -/--                  |
| TEXT     | GOTO TEXT → Text / Goto                         |
| HOLD     | SHIFT + HOLD → Shift + Stop /                   |
| TV/RADIO | PROGRAM TV/RADIO → TV/Radio /                   |
| SUBTITLE | EQ SUBTITLE → Subtitle / EQ                     |
| INDEX    | ANGLE INFO → Info / Angle                       |
| SIZE     | SIZE ZOOM → Zoom / Size                         |
| REVEAL   | OPT-TOOLS SETUP → Setup / OPT /                 |
| SUBPAGE  | SURROUND → Eject / Surround                     |
| MEDIA    | SHIFT + MEDIA DISPLAY → Shift + Display / Media |
| ▶▶       | SLOW ▶ → Play / Slow                            |
| ⏸        | STEP-FREEZE    → Pause / Step / Freeze          |
| ◀◀       | TUNE- ◀◀ → ◀◀ / Tune-                           |
| ▶▶       | TUNE+ ▶▶ → ▶▶ / Tune+                           |
| REC      | REC MODE → Rec / Rec Mode                       |

| Original   | Recharge   |
|------------|--|
| ■          | HOLD → Stop / Hold                               |
| ◀◀         | PRESET- → ◀◀ / Preset-                           |
| ▶▶         | PRESET+ → ▶▶ / Preset+                           |
| ■ (Red)    | NETFLIX SEARCH → Red / Netflix / Search          |
| ■ (Green)  | APP REPEAT → Green / APP / Repeat                |
| ■ (Yellow) | YouTube REPEAT A-B → Yellow / YouTube / Repeat   |
| ■ (Blue)   | Prime Video RANDOM → Blue / Prime Video / Random |
|            |  |
|            |  |
|            |  |
|            |  |
|            |  |
|            |  |
|            |  |
|            |  |
|            |  |
|            |  |
|            |  |
|            |  |

