
 
 
 


 


 






 
 


 



 

 


 





 
 
 
 
 
 

 
 

 




 

 





Original	Recharge	Original	Recharge
On/Off	 Power	Display	 Shift + Info
Mute	 Mute	Menu Right	 Right
Update	 Smart	Menu Off	 Exit
Reveal	 Media	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Subt.List	 Subt	Volume+	 Vol +
Sleep Timer	 Sleep	Chan.Up	 Ch +
Info	 Info	Menu audio	 Dual
Return TV	 TV/R	Volume-	 Vol -
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Menu Left	 Left	6	 6
OK Enter	 Ok	7	 7



Original	Recharge	Original	Recharge
8	 8	Nicam/Mono	 Shift + Green
9	 9	Level L	 Shift + Yellow
Guide -/-- 1.	 Guide	Audio-	 Shift + Vol -
0/10	 0	Audio+	 Shift + Vol +
2.Fav P/C 2.	 Pre Ch	Level R/Woofer	 Shift + Blue
Red	 Red		
Green	 Green		
Tone-	 I<<		
Yellow	 Yellow		
Blue	 Blue		
Off/Tim	 Shift + Options		
On/Tim	 Options		
Color+ P.Std	 Format		
Contrast+	 Shift + Ch +		
Color- S.Std	 Shift + Dual		
Contrast-	 Shift + Ch -		
Surround	 Shift + Red		

