



Original		Rechange		Original		Rechange	
	Power STB		Power		Left		Left
	Red / Audio		Dual		OK		Ok
	Mute		Mute		Right		Right
	TV / Rad		TV/R		Down		Down
	OPT.		Options		CH+		Ch +
	EPG		Guide		CH-		Ch -
	Red / Audio		Red		Vol+		Vol +
	Green / Stereo		Green		Vol-		Vol -
	Yellow / Text		Yellow		Info		Info
	Yellow / Text		Text		PVR		Smart
	Blue / Subtitle		Blue		Recall		Back
	Blue / Subtitle		Subt		<<		<<
	Menu		Menu		Play		Play
	Exit		Exit		>>		>>
	Page+		Shift + Ch +		Stop		Stop
	Page-		Shift + Ch -		Rec		Rec
	Up		Up		Pause		Pause





Original	Rechange	Original	Rechange
USB	Media		
Bookmark	List		
Use Bookmarks	Sleep		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
FAV	Pre Ch		
V/F	Format		

Original	Rechange

