















 













 



 







 







 



 



 







 







 








 



 

 
 

 


 







Original	Recharge	Original	Recharge
 Power	 Power	 0	 0
 Mute	 Mute / Dimmer	 Info	 Info / Angle
 Rec	 Rec / Rec Mode	 <<	 << / Tune-
 TV Sys.	 D.Menu / Top	 Vol -	 Vol-
 Browser	 Display / Media	 Vol +	 Vol+
 Copy	 Picture / Format	 I<<	 I<< / Preset-
 Music	 Smart / List	 I>>	 I>> / Tune+
 1	 1	 Play / Pause	 Play / Slow
 2	 2	 Play / Pause	 Pause / Step / Freeze
 3	 3	 Stop	 Stop / Hold
 4	 4	 >>I	 >>I / Preset+
 5	 5	 Home	 Shift + Menu / Home
 6	 6	 Up	 Up
 7	 7	 Return	 Back / Return
 8	 8	 Left	 Left
 9	 9	 Enter	 OK
 Repeat	 Shift + Green / APP / Repeat	 Right	 Right

Original	Recharge	Original	Recharge
 0	 0	 HDMI - BAT	 0
 Info	 Info / Angle	 <<	 << / Tune-
 Vol -	 Vol-	 Vol +	 Vol+
 I<<	 I<< / Preset-	 I>>	 I>> / Tune+
 Play / Pause	 Play / Slow	 Pause / Step / Freeze	 Pause / Step / Freeze
 Stop	 Stop / Hold	 >>I	 >>I / Preset+
 Home	 Shift + Menu / Home	 Up	 Up
 Return	 Back / Return	 Left	 Left
 Enter	 OK	 Right	 Right





	Original	Recharge		Original	Recharge
	 Menu	 Menu / Home			
	 Down	 Down			
	 Setup	 Setup / OPT /			
	 Time Shift	 Sleep / Timer			
	 Slow I>	 Shift + Play /			
	 A-B	 Shift + YouTube /			
	 Goto	 Shift + Text /			
	 Zoom	 Zoom / Size			
	 Audio	 Audio / Lang I/II			
	 Subtitle	 Subtitle / EQ			
	 Angle	 Shift + Info / Angle			
	 Red	 Red / Netflix / Search			
	 Green / EPG	 Green / APP / Repeat			
	 Green / EPG	 Guide / EPG / /--			
	 Yellow / Text	 Text / Goto			
	 Yellow / Text	 Yellow / YouTube / Repeat			
	Blue	Blue / Prime Video / Random			

	Original	Recharge		Original	Recharge

