





















 

 

 

 









Original	Rechange
 Power	 Power
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 O)/I-II/Audio	 Audio / Lang I/II
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear

Original	Rechange
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 CH+	 CH+ / Page+
 Index	 Display / Media
 Vol+	 Vol+
 CH-	 CH- / Page-
 List	 Smart / List
 Vol-	 Vol-
 ♥	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 EPG	 Guide / EPG / -/-
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 <<	 << / Tune-














 
 























Original	Recharge
 Green	 Green / APP / Repeat
 >>	 >> / Tune+
 Yellow	 Yellow / YouTube / Repeat
 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random
 >>	 >>  / Preset+
 [=]	 Text / Goto
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 [=+]	 Zoom / Size
 Stop/Still	 Stop / Hold
 Radio	 TV/Radio /
 [=◇]/[++]	 Setup / OPT /
 [=x]	 Picture / Format
 [=o]/Subtitle	 Subtitle / EQ
 DMP	 D.Menu / Top
 Rec	 Rec / Rec Mode

Original	Recharge





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Text / Play/Pause	 Play / Slow
 Text / Play/Pause	 Pause / Step / Freeze
 Stop / Still	 Stop / Hold
 Rec	 Rec / Rec Mode
 Audio I/II	 Audio / Lang I/II
 Subtitle / [≡o]	 Subtitle / EQ
 [≡x]	 Picture / Format
 Size / Aspect	 Zoom / Size
 Sleep	 Sleep / Timer
 Radio	 TV/Radio /
 DMP	 D.Menu / Top
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle

Original	Rechange
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Recall	 Back / Return
 Vol +	 Vol+
 List	 Smart / List
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Index	 Display / Media
 CH -	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original		Recharge		Original		Recharge	
	6		6				
	7		7				
	8		8				
	9		9				
	EPG		Guide / EPG / -/--				
	0		0				
	Fav		Fav / Marker / PC				
	Red / <<		Red / Netflix / Search				
	Green / >>		Green / APP / Repeat				
	Yellow /  <<		Yellow / YouTube / Repeat				
	Blue / >>		Blue / Prime Video / Random				
	Text / Play/Pause		Shift + Play /				
	Red / <<		Shift + Red / Netflix /				
	Green / >>		Shift + Green / APP /				
	Yellow /  <<		Shift + Yellow / YouTube /				
	Blue / >>		Shift + Blue / Prime				

