



Original	Rechange
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
FAV	Fav / Marker / PC
Recall	Back / Return
P.Mode	Picture / Format
S.Mode	Sound / Title
Audio	Audio / Lang I/II

Original	Rechange
Menu	Menu / Home
Info	Info / Angle
Source	AV / Input / RDS
Exit	Exit / Cancel / Clear
Up	Up
Down	Down
Left	Left
Right	Right
OK	OK
Vol+	Vol+
Vol-	Vol-
FAV+	Shift + CH+ /
FAV-	Shift + CH- /
EPG	Guide / EPG / -/-
CH+	CH+ / Page+
CH-	CH- / Page-
Aspect	D.Menu / Top



