







 


 













 
 






Original		Rechange		Original		Rechange	
	Power		Power		Exit		Exit
	TV/SAT		Smart		Recall		Back
	Mute		Mute		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		CH&Page+		Ch +
	8		8		CH&Page-		Ch -
	9		9		Red/TTX		Red
	0		0		Green/Sub.T		Green
	SAT		Media		Yellow/Zoom		Yellow
	FAV		Pre Ch		Blue/MP		Blue
	Menu		Menu		Tv/Radio		TV/R
	EPG		Guide		Audio		Dual





Original		Rechange		Original		Rechange	
	Pause		Pause				
	POS		Format				
	Rec		Rec				
	P/N		Options				
	Info		Info				
	T/S		3D				
	<<		<<				
	>>		>>				
	Play		Play				
	Stop		Stop				

