




 



 


 


 










Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Recall	 Pre Ch
 Source	 AV
 Sound	 Shift + Dual
 Picture	 Format

Original	Rechange
 Audio 1/2	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 Sleep	 Sleep
 CH+	 Ch +
 CH-	 Ch -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Index	 Back





Original		Recharge	
	Text		Text
	List		List
	Hold		Smart
	Subtitle		Subt
	Info		Info
	Cancel		Exit
	Reveal		TV/R
	Zoom		Eject

Original		Recharge	

