



 































































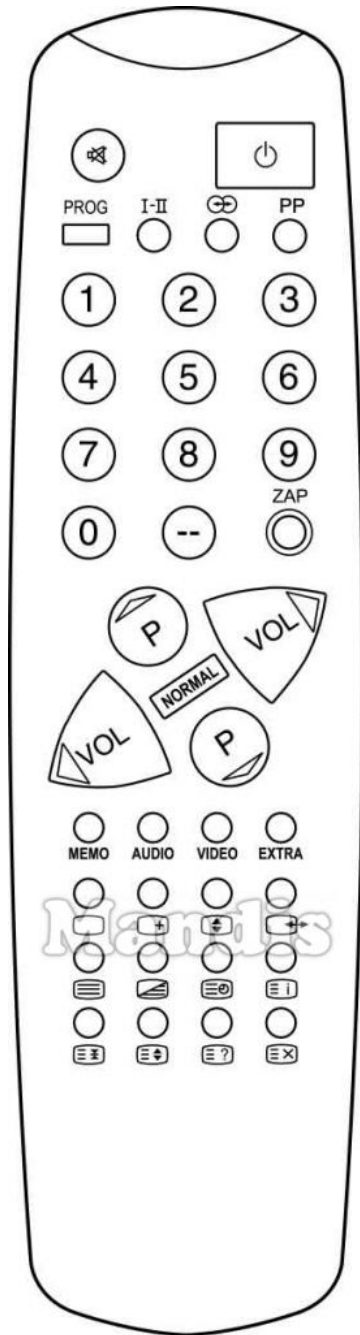

















 





Original	Rechange	Original	Rechange
	Mute		Mute / Dimmer
	Power		Power
	Prog		TV/Radio /
	I-II		Audio / Lang I/II
	O↔O		Sound / Title
	PP		Back / Return
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide / EPG / --
	ZAP		Smart / List
	Up / P+		Up
	Up / P+		CH+ / Page+
	Right / Vol+		Right
	Right / Vol+		Vol+
	Left / Vol-		Left
	Left / Vol-		Vol-
	Normal		OK
	Down / P-		Down
	Down / P-		CH- / Page-
	Red / Memo		Red / Netflix / Search
	Green / Audio		Green / APP / Repeat
	Green / Audio		Shift + Audio / Lang I/II
	Yellow / Video		Yellow / YouTube / Repeat
	Blue / Extra		Blue / Prime Video / Random
	[ ]		Display / Media
	[ + ]		Stop / Hold





Original	Rechange	Original	Rechange
 [ ◆ ]	 Setup / OPT /		
 [ ]↔	 D.Menu / Top		
 [ ≡ ]	 Text / Goto		
 [ /≡ ]	 +  Shift + Text /		
 [ ≡= ]	 Subtitle / EQ		
 [ ≡ i ]	 Info / Angle		
 [ ≡= ]	 Pause / Step / Freeze		
 [ ≡ ◆ ]	 Zoom / Size		
 [ ≡ ? ]	 AV / Input / RDS		
 [ ≡ X ]	 Exit / Cancel / Clear		

