



 










 


 
 

 

 


 


 

 


 
 

 

 
 
 
 
 

 

 


 


	Original	Rechange		Original	Rechange
	Power		Power		Down / PR-
	Info		Info		Right / Vol+
	Mute		Mute		Right / Vol+
	Picture		Format		Left / Vol-
	V.Size		3D		Left / Vol-
	Source		AV		Menu
	Sound		Dual		Menu
	S.Mode		Shift + Dual		1
	Still		Pause		2
	Digest		Smart		3
	Pre.PR		Back		4
	Sleep		Sleep		5
	Text		Text		6
	Exit		Exit		7
	Up / PR+		Up		8
	Up / PR+		Ch +		9
	Down / PR-		Down		0



