



























 





















 





 






 
 







Original	Rechange
 Standby	 Power
 DTV/VCR	 Display / Media
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Fav / Marker / PC
 Audio	 Audio / Lang I/II
 Recall	 Back / Return
 Subtitle	 Subtitle / EQ

Original	Rechange
 Info	 Info / Angle
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 Text	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat





Original	Recharge
Blue	Blue / Prime Video / Random
Tv/Radio	TV/Radio /
Rec List	Smart / List
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
<<	<< / Tune-
>>	>> / Tune+
Record	Rec / Rec Mode

Original	Recharge

