







 









 




 










Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i / EPG	 Guide / EPG / -/--
 i / EPG	 Info / Angle
 0	 0
 List	 Smart / List
 Up / CH+	 CH+ / Page+
 Up / CH+	 Up

Original	Rechange
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 OK	 OK
 Right / Vol+	 Vol+
 Right / Vol+	 Right
 Down / CH-	 Down
 Down / CH-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Rec	 Rec / Rec Mode
 Swap	 Back / Return
 Red / <<	 Red / Netflix / Search
 Red / <<	 << / Tune-
 Green / Play	 Play / Slow
 Green / Play	 Green / APP / Repeat
 Blue / >> / Text	 >> / Tune+
 Blue / >> / Text	 Blue / Prime Video / Random





Original	Rechange	Original	Rechange
Blue / >> / Text	Text / Goto		
Radio	Shift + 6		
Radio	Shift + TV/Radio / Program		
Yellow / Pause	Pause / Step / Freeze		
Yellow / Pause	Yellow / YouTube / Repeat		
Stop	Stop / Hold		
TV	Shift + 1		
TV	TV/Radio /		
F1	Sound / Title		
F2	Audio / Lang I/II		

Original	Rechange

