



 





 





 













 
 


 



 

 







 

 





 


 
 















Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		EPG		Guide / EPG / -/-
	1		1		Exit		Exit / Cancel / Clear
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		Tv/Radio		TV/Radio /
	7		7		Down		Down
	8		8		Tv/SAT		Smart / List
	9		9		P-		CH- / Page-
	Info		Info / Angle		UHF		Display / Media
	0		0		FAV		Fav / Marker / PC
	Audio		Audio / Lang I/II		P+		CH+ / Page+
	Pause		Pause / Step / Freeze		Red		Red / Netflix / Search
	Mode		Picture / Format		Green		Green / APP / Repeat
	PRE		Back / Return		Yellow		Yellow / YouTube / Repeat








Original		Recharge	
	Blue/Teletext		Blue / Prime Video / Random
	Blue/Teletext		Text / Goto

Original		Recharge	





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Info	 Info / Angle
 0	 0
 Audio	 Audio / Lang I/II
 Pause	 Pause / Step / Freeze
 Mode	 Picture / Format
 PRE	 Back / Return

Original	Rechange
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 TV/Radio	 TV/Radio /
 Down	 Down
 TV/SAT	 Smart / List
 P-	 CH- / Page-
 P+	 CH+ / Page+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue / Teletext	 Blue / Prime Video / Random
 Blue / Teletext	 Text / Goto

