



 
 




	Original	Rechange		Original	Rechange
	Power		Power		List
	[?]		Format		Q.View
	Tv/Radio		TV/R		Settings
	Guide		Guide		Q.Menu
	Info		Info		Back
	[ ]/Ratio		3D		Exit
	Input		AV		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Ok
	5		5		FAV
	6		6		Pre Ch
	7		7		PIP/AD
	8		8		Shift + Subt
	9		9		Vol +
	0		0		Vol -
					Mute
					PR+
					Ch +

	Original	Rechange		Original	Rechange
	List		List		List
	D. Menu		D. Menu		D. Menu
	Options		Options		Options
	Menu		Menu		Menu
	Back		Back		Back
	Exit		Exit		Exit
	Up		Up		Up
	Down		Down		Down
	Right		Right		Right
	Left		Left		Left
	Ok		Ok		Ok
	FAV		Pre Ch		Pre Ch
	PIP/AD		Shift + Subt		Shift + Subt
	Vol +		Vol +		Vol +
	Vol -		Vol -		Vol -
	Mute		Mute		Mute
	PR+		Ch +		Ch +





Original	Recharge
PR-	Ch -
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Subtitle	Subt
Text	Text
T.Opt	Shift + Options
Stop	Stop
Play	Play
Pause	Pause
<<<	<<<
>>>	>>>

Original	Recharge

