



Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 DTV/ATV	 Info / Angle
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Rechange
 Vol+	 Vol+
 MTS	 Setup / OPT /
 CH+	 CH+ / Page+
 Vol-	 Vol-
 RecList	 Smart / List
 CH-	 CH- / Page-
 FAV/List	 Fav / Marker / PC
 Rec	 Rec / Rec Mode
 Freeze	 Pause / Step / Freeze
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down





Original	Recharge	Original	Recharge
 Display	 Display / Media	 Size	 Zoom / Size
 Red	 Red / Netflix / Search	 Hold	 Shift + Stop /
 Green	 Green / APP / Repeat	 Text	 Text / Goto
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 <<	 << / Tune-		
 Guide	 Guide / EPG / -/--		
 Play	 Play / Slow		
 Pause/TimeShift	 Shift + Pause / Step /		
 >>Aspect	 >> / Tune+		
 I<</Cancel	 Shift + Exit / Cancel / Clear		
 I<</Cancel	 I<< / Preset-		
 >>I/Sub.PG	 >>I / Preset+		
 Stop/Index	 Stop / Hold		
 Tv/Radio	 TV/Radio /		
 Subtitle	 Subtitle / EQ		
 Reveal	 D.Menu / Top		

