



Original	Recharge	Original	Recharge
	Power		Power
	Timer		Sleep / Timer
	Prog+		Shift + Up
	Day+		Shift + Right
	Start+		Shift + Vol+
	Stop+		Shift + CH+ /
	Text Index		Text / Goto
	Text Reveal		Subtitle / EQ
	Text Size		Zoom / Size
	[Stop]		Shift + Stop /
	Prog-		Shift + Down
	Day-		Shift + Left
	Start-		Shift + Vol-
	Stop-		Shift + CH- /
	Red / VPS		Shift + Red / Netflix /
	Green / ED/EW		Shift + Green / APP /
	Yellow		Shift + Yellow / YouTube / Repeat

Original	Recharge	Original	Recharge
	Blue / C/S		Shift + Blue / Prime
	Timer		Shift + Menu /
	Timer Clear		Shift + Exit / Cancel / Clear
	Timer On/Off		Shift + Info / Angle
	SP/LP		Smart / List
	SV/V+		Display / Media
	Back / Return		Back / Return
	PAL / SEC		Picture / Format
	INS / DUB		Sound / Title
	Tip		Menu / Home
	Code		Exit / Cancel / Clear
	Counter		I<< / Preset-
	Reset		>>I / Preset+
	Audio		Audio / Lang I/II
	SAT		Shift + 0
	1		1
	2		2





	Original	Rechange		Original	Rechange
	3	CD - STB 3			Left / Vol-
	4	VIDEO 4			Down / CH-
	5	TAPE 5			Down / CH-
	6	TUNER 6			Rec
	7	AUX - HDD 7			Stop
	8	USB 8			Pause
	9	BLUETOOTH 9			Play
	VPT	GUIDE EPG			Open / Close
	0	HDMI - SAT 0			<< / Tune-
	AV	RDS AV INPUT			>> / Tune+
	i	ANGLE INFO			Index
	Up / CH+				Index Mark
	Up / CH+	CH PAGE			Index Erase
	Right / Vol+				Traking
	Right / Vol+	VOL			
	OK				
	Left / Vol-	VOL			





Original	Rechange
 Power	 Power
 Timer	 Sleep / Timer
 Prog+	 Shift + Up
 Day+	 Shift + Right
 Start+	 Shift + Vol+
 Stop+	 Shift + CH+ /
 Text Index	 Text / Goto
 Text Reveal	 Subtitle / EQ
 Text Size	 Zoom / Size
 [Stop]	 Shift + Stop /
 Prog-	 Shift + Down
 Day-	 Shift + Left
 Start-	 Shift + Vol-
 Stop-	 Shift + CH- /
 Red / VPS	 Shift + Red / Netflix /
 Green / ED/EW	 Shift + Green / APP /
 Yellow	 Shift + Yellow / YouTube / Repeat

Original	Rechange
 Blue / C/S	 Shift + Blue / Prime
 Timer	 Shift + Menu /
 Timer Clear	 Shift + Exit / Cancel / Clear
 Timer On/Off	 Shift + Info / Angle
 SP/LP	 Smart / List
 SV/V+	 Display / Media
 Back / Return	 Back / Return
 PAL / SEC	 Picture / Format
 INS / DUB	 Sound / Title
 Tip	 Menu / Home
 Code	 Exit / Cancel / Clear
 Counter	 I<< / Preset-
 Reset	 >>I / Preset+
 Audio	 Audio / Lang I/II
 SAT	 Shift + 0
 1	 1
 2	 2






 







	Original	Rechange		Original	Rechange
	3	 3			 Vol-
	4	 4			 Down
	5	 5			 CH- / Page-
	6	 6			 Rec / Rec Mode
	7	 7			 Stop / Hold
	8	 8			 Pause / Step / Freeze
	9	 9			 Play / Slow
	VPT	 Guide / EPG / -/-			 Eject / Surround
	0	 0			 << / Tune-
	AV	 AV / Input / RDS			 >> / Tune+
	i	 Info / Angle			 Red / Netflix / Search
	Up / CH+	 Up			 Green / APP / Repeat
	Up / CH+	 CH+ / Page+			 Yellow / YouTube / Repeat
	Right / Vol+	 Right			 Blue / Prime Video / Random
	Right / Vol+	 Vol+			
	OK	 OK			
	Left / Vol-	 Left			





Original		Recharge		Original		Recharge	
	Power		Power		Left / Vol-		Vol-
	1		1		Down / CH-		Down
	2		2		Down / CH-		CH- / Page-
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	AV		AV / Input / RDS				
	Up / CH+		Up				
	Up / CH+		CH+ / Page+				
	Right / Vol+		Right				
	Right / Vol+		Vol+				
	Left / Vol-		Left				

