



Original	Rechange
 Power	 Power
 Timer	 Sleep / Timer
 Prog+	 Shift + Up
 Day+	 Shift + Right
 Start+	 Shift + Vol+
 Stop+	 Shift + CH+ /
 Text Index	 Text / Goto
 Text Reveal	 Subtitle / EQ
 Text Size	 Zoom / Size
 [Stop]	 Shift + Stop /
 Prog-	 Shift + Down
 Day-	 Shift + Left
 Start-	 Shift + Vol-
 Stop-	 Shift + CH- /
 Red / VPS	 Shift + Red / Netflix /
 Green / ED/EW	 Shift + Green / APP /
 Yellow	 Shift + Yellow / YouTube / Repeat

Original	Rechange
 Blue / C/S	 Shift + Blue / Prime
 Timer	 Shift + Menu /
 Timer Clear	 Shift + Exit / Cancel / Clear
 Timer On/Off	 Shift + Info / Angle
 SP/LP	 Smart / List
 SV/V+	 Display / Media
 Back / Return	 Back / Return
 PAL / SEC	 Picture / Format
 INS / DUB	 Sound / Title
 Tip	 Menu / Home
 Code	 Exit / Cancel / Clear
 Counter	 I<< / Preset-
 Reset	 >>I / Preset+
 Audio	 Audio / Lang I/II
 SAT	 Shift + 0
 1	 1
 2	 2





	Original	Rechange	Original	Rechange
	3	3		Left / Vol-
	4	4		Down / CH-
	5	5		Down / CH-
	6	6		Rec
	7	7		Stop
	8	8		Pause
	9	9		Play
	VPT	Guide / EPG / -/-		Open / Close
	0	0		<< / Tune-
	AV	AV / Input / RDS		>> / Tune+
	i	Info / Angle		Index
	Up / CH+	Up		Index Mark
	Up / CH+	CH+ / Page+		Index Erase
	Right / Vol+	Right		Traking
	Right / Vol+	Vol+		
	OK	OK		
	Left / Vol-	Vol-		





Original	Rechange
 Power	 Power
 Timer	 Sleep / Timer
 Prog+	 Shift + Up
 Day+	 Shift + Right
 Start+	 Shift + Vol+
 Stop+	 Shift + CH+ /
 Text Index	 Text / Goto
 Text Reveal	 Subtitle / EQ
 Text Size	 Zoom / Size
 [Stop]	 Shift + Stop /
 Prog-	 Shift + Down
 Day-	 Shift + Left
 Start-	 Shift + Vol-
 Stop-	 Shift + CH- /
 Red / VPS	 Shift + Red / Netflix /
 Green / ED/EW	 Shift + Green / APP /
 Yellow	 Shift + Yellow / YouTube / Repeat

Original	Rechange
 Blue / C/S	 Shift + Blue / Prime
 Timer	 Shift + Menu /
 Timer Clear	 Shift + Exit / Cancel / Clear
 Timer On/Off	 Shift + Info / Angle
 SP/LP	 Smart / List
 SV/V+	 Display / Media
 Back / Return	 Back / Return
 PAL / SEC	 Picture / Format
 INS / DUB	 Sound / Title
 Tip	 Menu / Home
 Code	 Exit / Cancel / Clear
 Counter	 I<< / Preset-
 Reset	 >>I / Preset+
 Audio	 Audio / Lang I/II
 SAT	 Shift + 0
 1	 1
 2	 2










 




























	Original	Rechange		Original	Rechange
	3	 3			 Vol-
	4	 4			 Down
	5	 5			 CH- / Page-
	6	 6			 Rec / Rec Mode
	7	 7			 Stop / Hold
	8	 8			 Pause / Step / Freeze
	9	 9			 Play / Slow
	VPT	 Guide / EPG / -/-			 Eject / Surround
	0	 0			 << / Tune-
	AV	 AV / Input / RDS			 >> / Tune+
	i	 Info / Angle			 Red / Netflix / Search
	Up / CH+	 Up			 Green / APP / Repeat
	Up / CH+	 CH+ / Page+			 Yellow / YouTube / Repeat
	Right / Vol+	 Right			 Blue / Prime Video / Random
	Right / Vol+	 Vol+			
	OK	 OK			
	Left / Vol-	 Left			





	Original	Rechange		Original	Rechange
	Power		Power		Left / Vol-
	1		1		Down / CH-
	2		2		Down / CH-
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	AV		AV / Input / RDS		
	Up / CH+		Up		
	Up / CH+		CH+ / Page+		
	Right / Vol+		Right		
	Right / Vol+		Vol+		
	Left / Vol-		Left		

