
















































 











































Original	Recharge
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i	 Info / Angle
 0/AV	 0
 Mute	 Mute / Dimmer
 Up	 Up
 P+	 CH+ / Page+
 Vol+	 Vol+
 Right	 Right

Original	Recharge
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 P-	 CH- / Page-
 Down	 Down
 AUX	 Shift + 7
 TXT	 Text / Goto
 Red/Picture	 Red / Netflix / Search
 Green/Timer	 Green / APP / Repeat
 Yellow/Format	 Yellow / YouTube / Repeat
 Blue/Audio	 Blue / Prime Video / Random
 Colour-	 << / Tune-
 Colour+	 >> / Tune+
 Brightness-	 I<< / Preset-
 Brightness+	 >>I / Preset+





Original	Recharge
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i	 Info / Angle
 0/AV	 0
 Mute	 Mute / Dimmer
 Up	 Up
 P+	 CH+ / Page+
 Right	 Right
 Vol+	 Vol+

Original	Recharge
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 P-	 CH- / Page-
 Down	 Down
 AUX	 Shift + 7
 TXT	 Text / Goto
 Red/Picture	 Red / Netflix / Search
 Green/Timer	 Green / APP / Repeat
 Yellow/Format	 Yellow / YouTube / Repeat
 Blue/Audio	 Blue / Prime Video / Random
 Colour-	 << / Tune-
 Colour+	 >> / Tune+
 Brightness-	 I<< / Preset-
 Brightness+	 >>I / Preset+



